

OPPO UDP-203/205 Region Free Upgrade Installation instructions

Installation Manual

Before you start we recommend you read and understand this manual completely.

This upgrade is done entirely at your own risk.


Please note: We do NOT accept any liability in the event of damage to your BD-player in the process of installation or in the usage of the upgrade.

We can confirm that the upgrade can easily be removed at any time and re-installed if needed.


1) Opening your player.

Make sure that your player is disconnected from the mains electricity before you even start opening the player. If you set the unit in front of you with the display towards you there are 5 screws at the back of the player. Remove them using a Philips screwdriver. Remove the 2 screws at the left and 2 at the right side. Remove the top cover, by gently lifting the back of the cover up, until it comes free.


2) Once you have the unit opened please locate this board and the empty connector where the red arrow is pointed. For Oppo UBD-205 you will need to remove 2 audio boards to get to the board that has the connector. Please remove to the bottom of this instruction sheet for a diagram of the boards.

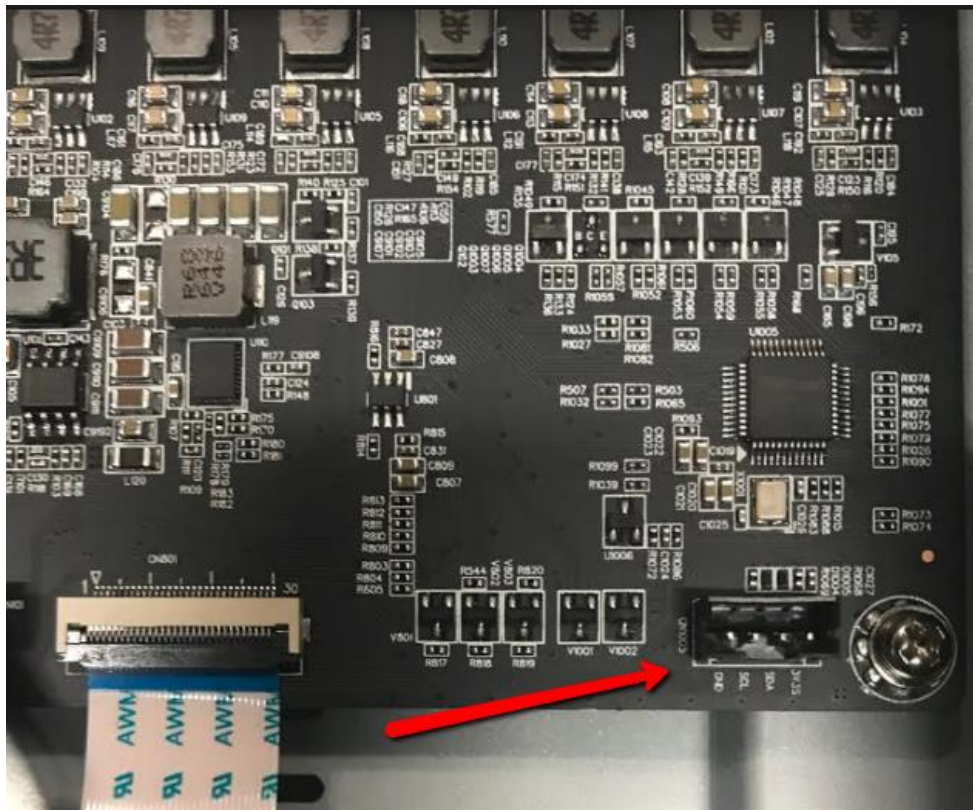


- 3) Insert the white cable from the upgrade board into the connector

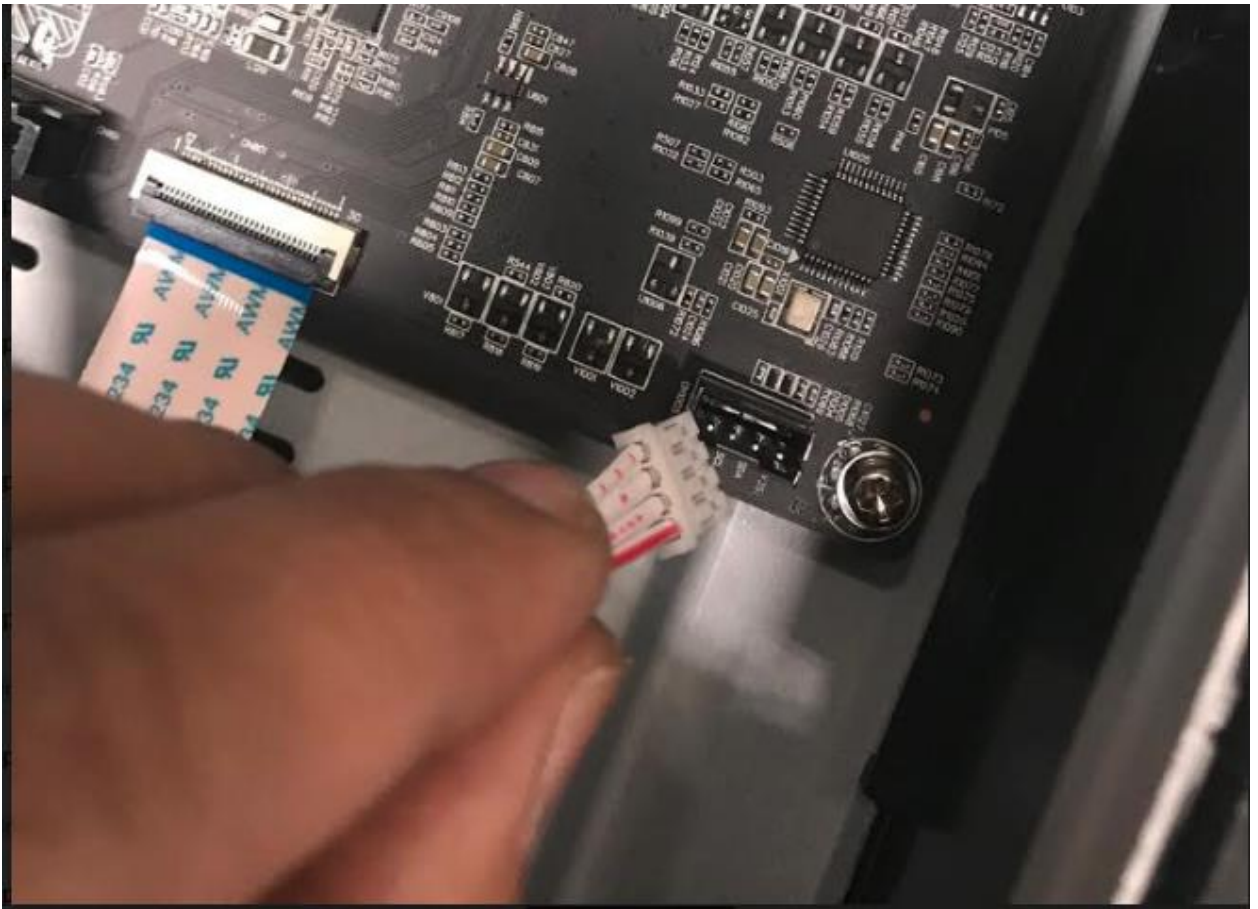


4) It should look like this once inserted

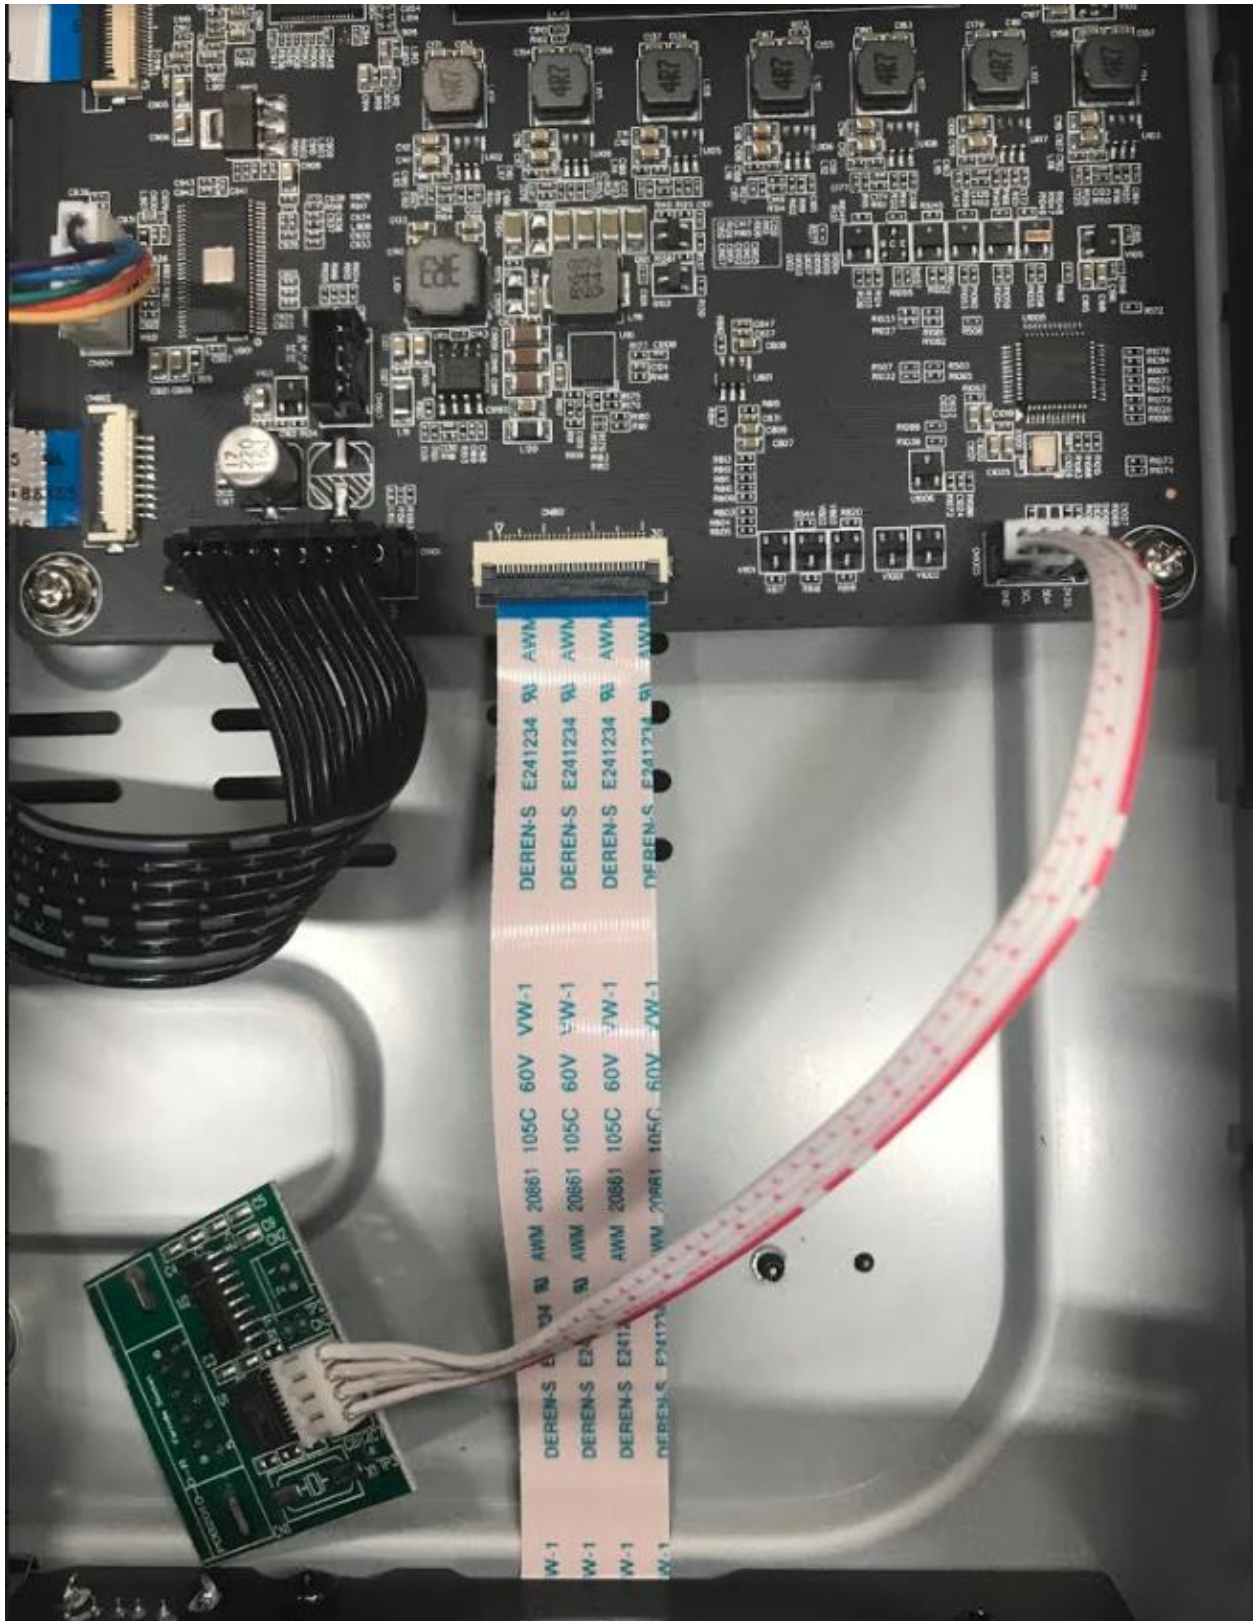

- 5) Use the provided Plastic tie to secure the upgrade board to the player around the cables to prevent it from moving around.

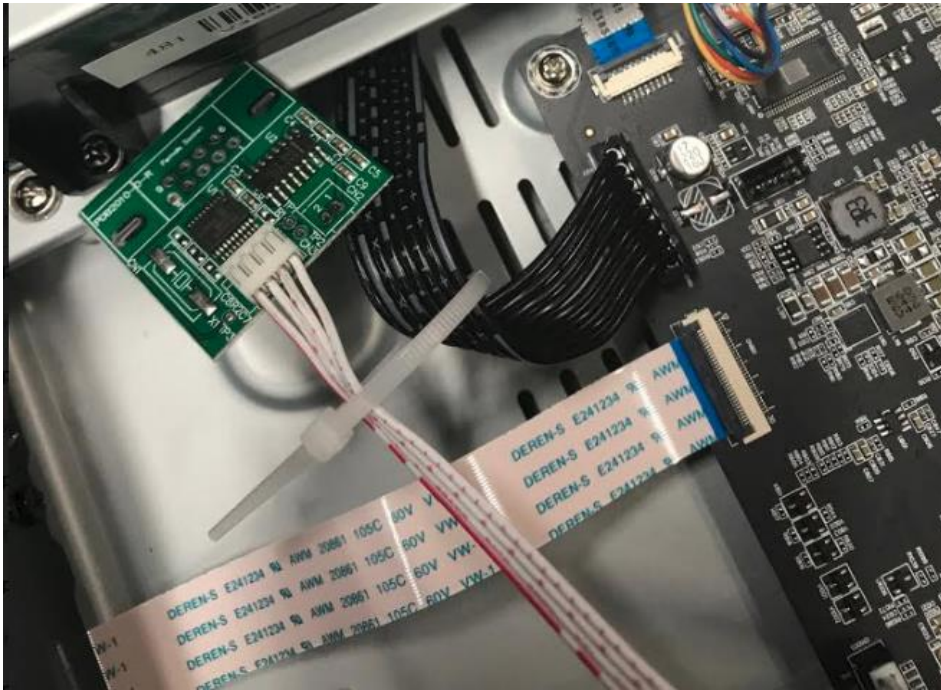

- 6) Tighten the Tie to secure the board

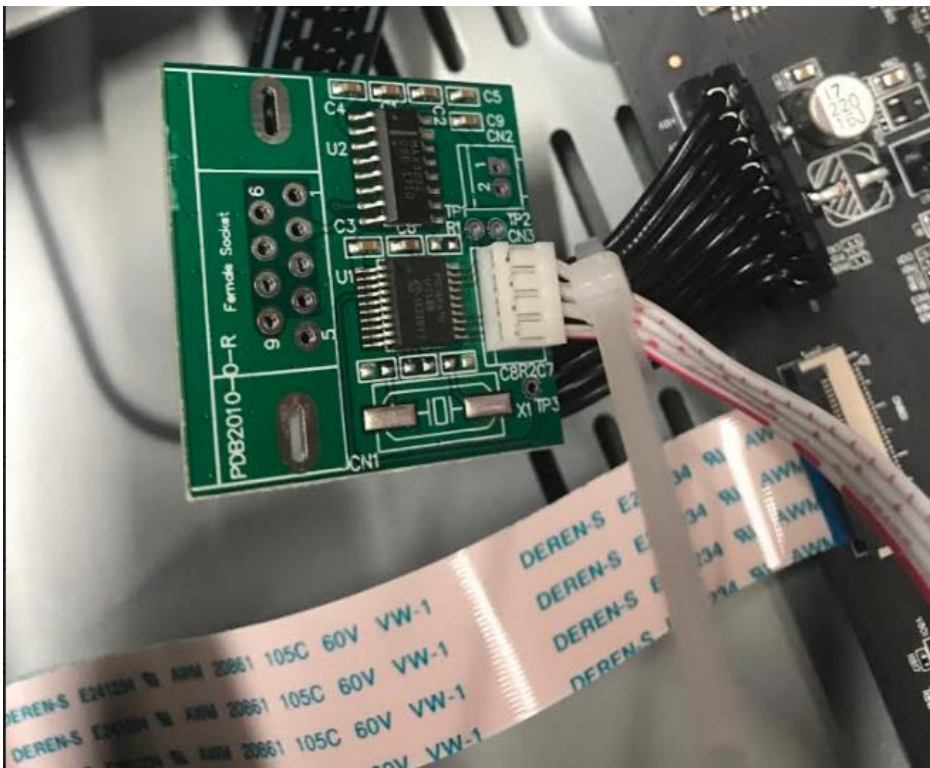

- 7) Close up the top of the player. The upgrade board is now installed.

FOR OPPO BDP-205 – 2 extra boards need to be removed. Please see image below



Region switching instructions on next page

OPPO REGION SWITCHING INSTRUCTIONS:

Region switching for standard DVDs from region 0-8 is automatic. Just put in your disc and press play.

Region switching for Blu-ray regions is done using the remote control.

Press the following keys to select the corresponding Region
The player must be ON with NO disc inside:

Please wait a second after pressing each button.

For Region A	Dimmer, Dimmer, Dimmer, Mute, 1
For Region B	Dimmer, Dimmer, Dimmer, Mute, 2
For Region C	Dimmer, Dimmer, Dimmer, Mute, 3

Now turn OFF the player and your blu-ray setting will be effective after reboot.

The dimmer button is on the remote on the lower right side 3 button up from the bottom.
The mute button is on the right side 2nd button from the top.

Firmware updates- Firmware updates can be done via internet. To update players firmware; go to the home menu, then setup menu, and then go to Software update. You must have the player connected to the internet. Click on Update Via Internet and if there is a new firmware the player will automatically update. DO not turn the player off while it is updating.

Trouble shooting tips:

BLU-RAY DISC SAYS WRONG REGION AFTER FOLLOWING ABOVE INSTRUCTIONS

In most cases this is solved by pressing stop twice on the remote control. If this does not work you may need to do a factory reset so the player does not remember the last place left off on the disc. Also turning resume play off can prevent this from happening in the future.